


EZ FOAMER TIP DIRECTIONS

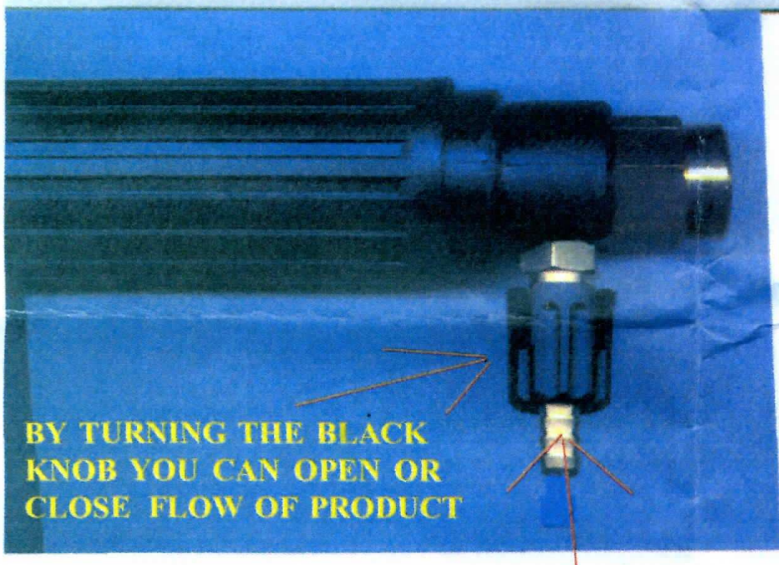

SMALLER STAINLESS TIP (6 OZ) = BIO GEL / UFC (HEAVILY SOILED SURFACES)
BLACK TIP (4 OZ) = KENO X5 / UFC / CID FOAM (DILUTE JUG WITH WATER IF NECESSARY)
LARGER STAINLESS TIP (10Z) = VIROCID / KENO X5

DO NOT USE A TIP WITH LIQUID CHISEL.

****ALWAYS** RINSE YOUR EZ FOAMER THOROUGHLY WITH FRESH WATER TO PROLONG ITS LIFE

NOTE: THE METERING TIP **SCREWS** INTO THE BARB. DO NOT FORCE THE TIP IN OR OUT OF BARB. FOR BEST RESULTS PLEASE DO THE FOLLOWING:

1. WASH OUT THE LARGE CHUNKS OF MANURE AND WET EVERYTHING DOWN.
2. SCREW THE SMALLER STAINLESS TIP INTO THE BRASS BARB. OPEN THE VALVE COMPLETELY BY TURNING THE BLACK KNOB.
3. PUT BIO GEL INTO BACK PACK UNIT AND ATTACH HOSE, THE ORANGE RUBBER PEICE FITS OVER TIP AND BRASS BARB IF YOU CHOOSE THIS HOSE / OTHER HOSE WILL WORK ALSO. DO NOT PREMIX.
4. FOAM AREA AND LET SIT 15 - 20 MINUTES. YOU WANT TO FOAM AHEAD ENOUGH WITHOUT LETTING BIO GEL DRY. USUALLY COVER ENOUGH SURFACE AREA THAT WILL TAKE YOU 1 TO 1 ½ HOURS TO CLEAN.
5. WASH LIKE NORMAL. BIO GEL WILL HELP LOOSEN SOILS AND REDUCE WASHING TIMES. THE MAIN REASON FOR BIO GEL IS TO GET A CLEANER BARN TO ALLOW DISINFECTANT TO WORK FOR EFFECTIVELY.
6. AFTER YOU WASH, SCREW THE STAINLESS STEEL TIP INTO THE BRASS BARB TO DISINFECT (1 OZ/ GAL). PUT DISINFECTANT VIROCID INTO BACK PACK AND FILL TO THE TOP OF THE NOTCH ON THE BACK OF THE JUG. DILUTE THE REST OF THE JUG WITH WATER. FOR KENO X5 USE BLACK TIP (4 OZ / GAL) AND FILL 1/2 KENO X5 AND 1/2 WATER.
7. FOAM DISINFECTANT ON AREA AND LET FOAM DRY. YOU DO NOT NEED TO WASH OF VIROCID OR KENO X5 IF YOU HAVE ANY QUESTIONS PLEASE FEEL FREE TO CALL US AT 1-888-378-4045.

ALWAYS WEAR PROTECTIVE CLOTHING / GLOVES WHEN HANDLING PRODUCTS!!!!!!